

DRIEAZ

OWNER'S MANUAL

**WARRANTY • SAFETY • OPERATING INSTRUCTIONS
MAINTENANCE • SPECIFICATIONS • TROUBLESHOOTING**



DrizAir 80 shown (hand-carried with no wheels, handle, or or pump). DrizAir 80 DX is also available. Folding Stand is available.



DrizAir 110 DX shown (with wheels, handle and pump). DrizAir 110 hand-carried is also available.

DRIZAIR 80 and DRIZAIR 110 REFRIGERANT DEHUMIDIFIERS

**This manual has important safety warnings and operating information.
Please read before using the dehumidifier and save for future reference.**

PURCHASE DATE: _____ **SERIAL NO.:** _____

DEALER: _____

DRI-EAZ PRODUCTS, INC. 15180 Josh Wilson Road, Burlington, WA 98233

TABLE OF CONTENTS

SAFETY INFORMATION.....	2
5-YEAR WARRANTY	2
LOCATING THE DEHUMIDIFIER	4
OPERATING CONDITIONS	4
PRINCIPLES OF OPERATION	4
Drying Operation	5
Defrosting	5
EXTRACTION RATES.....	5
GRAVITY FEED DRAINAGE.....	6
OPTIONS.....	6
Automatic Pump	6
Stacking Two Units.....	6
ELECTRICAL CONNECTIONS.....	6
Extension Cord Lengths.....	6
OPERATING INSTRUCTIONS.....	6
MAINTENANCE.....	7
Cleaning the Filter and Coils.....	7
Electrical Wiring & Cord	7
Fan Motor and Drain Hoses	8
SPECIFICATIONS	9
TROUBLESHOOTING.....	11

Congratulations on your selection of a new Driz-Air Dehumidifier from Dri-Eaz Products Inc. It is our goal to offer you the best high performance dehumidifier available. We invite your written appraisal and suggestions for improvements. Reading this Owner's Manual will help you achieve maximum benefit from your dehumidifier.

SAFETY INFORMATION

Dri-Eaz is concerned about the safety of everyone who uses or comes in contact with the dehumidifier. The dehumidifier is designed to be operated in compliance with the safety warnings and instructions provided in this manual. Like other electrical devices, the dehumidifier can become dangerous if it is abused, damaged or misused. Failure to observe the following warnings can result in injury to persons, fire danger or damage to the dehumidifier.

SAFETY WARNINGS

To reduce the risk of electrical shock, fire, or personal injury, read and follow each warning below.

Keep the Dehumidifier Grounded

The dehumidifier is designed to operate on ordinary household 115 volt, 60 Hertz alternating current and comes with a three pronged grounding plug. Never remove or modify this three pronged plug. Do not use an ungrounded two pronged adapter. The grounding

pin on the dehumidifier's plug is an essential safety feature that will help reduce the risk of shock or fire in the event of an electrical hazard.

Comment [DS1]: NOTE - FONT CORRUPTION. As of 8.31.95, the reverse type in Danger and Warning boxes, on pages 2-5, does not print if printed with page one. If printed separately they print OK.

Danger

Removal or alteration of the grounding plug, or use of an adapter that defeats the dehumidifier's electrical grounding, can create risk of serious personal injury or fire in the event of damage to or malfunction of this product. Do not use the dehumidifier if you cannot connect it to a receptacle that accepts a three-pronged plug. If you are unsure whether a receptacle is grounded, consult a qualified electrician.

Protect the Power Cord from Damage

Never operate the dehumidifier with a damaged or frayed power cord or extension cord. Never unplug the dehumidifier by pulling the cord. Grasp the plug firmly and pull straight out. Do not close a door on the cord, or pull the cord over or around sharp corners or rough surfaces. Do not run equipment over the cord or use the cord as a handle. Keep the cord away from heated surfaces and out of standing water.

Keep Out of Water

Do not place the dehumidifier in standing or running water. Never operate or store the dehumidifier outdoors or expose the dehumidifier to rain or water from overhead sources, such as leaking pipes or dripping ceilings. The dehumidifier is not weather proof and water may drip into its electrical parts and cause risk of electrical shock or damage to the unit.

Danger

The dehumidifier may be operated on a damp surface, but you should make sure that no water pools around the machine. If it does, do not operate the dehumidifier until the surface has dried sufficiently to eliminate pooling.

Electrical Components Must Be Dry

Never allow water inside the dehumidifier's electrical components. If these area become wet for any reason, thoroughly dry them before using the dehumidifier.

Handle With Care

Do not drop or throw the dehumidifier. Rough treatment can permanently damage the refrigerant system or wiring and create a hazardous condition.

Keep Children Away

The dehumidifier is not a toy. Do not allow children to play with or around the dehumidifier. Be sure that the dehumidifier is inaccessible to children when left unattended. Children can hurt themselves or others by playing with or around a dehumidifier. Secure all rooms

and buildings in which a dehumidifier is left unattended while running.

Put Warning Label on Bucket

If using an open bucket to catch water from the dehumidifier, the container must be labelled with a warning to help prevent children from drowning.

Secure Unit During Transport

When transporting in a vehicle, secure the dehumidifier to prevent sliding and possible damage to the unit or injury to vehicle occupants.

Run on Stable Surface

Always operate the dehumidifier on a stable level surface, such as a floor or strong counter.

Keep Air Intakes Unobstructed

Operate the dehumidifier away from draperies and other materials that may come in contact with its air intakes. Do not allow any material to clog the air intakes, as this may cause the dehumidifier to overheat. Do not allow oil, grease, or other matter (including sawdust and drywall dust) to be drawn into the air intakes of the dehumidifier. Always use a clean air filter.

Warning

If using an open bucket to catch water from the dehumidifier, the container must be labelled with a warning to help prevent children from drowning.

Don't Insert Objects

Never insert any object into the dehumidifier, as doing so could create a danger by damaging the unit or causing an electrical shock hazard.

Don't Modify Unit

Never modify the motor, wiring or casing of the dehumidifier.

Maintenance or Repair

Do not attempt to disassemble or repair a dehumidifier if you are not qualified to do so. Normal maintenance operations and troubleshooting solutions can be handled by the technician in the field. More complex problems should be handled by an authorized service technician. See the Troubleshooting section.

If the dehumidifier is not working as it should, return it to Dri-Eaz or take it to a trained service person for repair. For information about authorized repair and maintenance, call Dri-Eaz at (360) 757-7776.

Danger

Do not attempt to service or clean the dehumidifier while it is plugged into an electrical outlet. It is dangerous for an unqualified individual to attempt to disassemble or repair the dehumidifier.

7-YEAR LIMITED WARRANTY

7-Year Housing and Frame Warranty: Dri-Eaz will repair or replace, at its option, parts necessary to correct the housing and frame from metal cracks, weld separations, or defects in materials and workmanship for a period of seven (7) years from purchase date. The customer is responsible for all labor and shipping charges after one year.

5-Year Compressor and Coils Warranty: Dri-Eaz promises to the original purchaser to repair or replace, at its option, parts necessary to correct the compressor, evaporator or condenser coil found to be defective in materials or workmanship for a period of five (5) years from date of purchase. The customer is responsible for all labor and shipping charges after one year.

3-Year Comprehensive Warranty: Dri-Eaz promises to the original purchaser to repair or replace, at its option, any part of the DrizAir Dehumidifier that proves to be defective in workmanship or materials for a period of three (3) years from date of purchase. During the first year, Dri-Eaz will cover all material, labor and shipping costs, to and from the service center. After one (1) year, the customer is responsible for labor costs and shipping costs to and from the service center.

Danger

Removal or alteration of the grounding plug, or use of an adapter that defeats the dehumidifier's electrical grounding, can create risk of serious personal injury or fire in the event of damage to or malfunction of this product. Do not use the dehumidifier if you cannot connect it to a receptacle that accepts a three-pronged plug. If you are unsure whether a receptacle is grounded, consult a qualified electrician.

Limitations: This warranty shall not extend to any products showing effects of misuse, disassembly, alteration, lack of proper maintenance, corrosive chemicals, improper voltage, accident damage, unauthorized repairs, use of other than genuine parts and materials, fire, flood, normal wear or any other causes beyond Dri-Eaz Products' control. The warranty obligation extends only to the repairs or replacement of parts found, upon Dri-Eaz Products' examination, to be defective.

The foregoing constitutes the entire warranty and no other warranty, liability, contingency or responsibility, direct, indirect, consequential or in any way connected with the sale or operation of equipment products is expressed or implied. This warranty gives you specific legal rights. You may have additional rights under law, which vary from state to state.

To receive warranty service: You must write in or call for a Return Authorization. No parts will be accepted without the serial number of the equipment the part was taken out of and an authorization number, nor will any credit be given until the parts are received. Please direct questions on the warranty to an authorized distributor or Dri-Eaz Products Inc. at (360) 757-7776. If damage was sustained during shipping, be sure to retain the shipping materials for a possible freight damage claim.

LOCATING THE DEHUMIDIFIER

The dehumidifier must be operated in an enclosed area to achieve maximum efficiency. All doors, windows and other openings to the outside must be closed tightly. The dehumidifier should be placed where there is no restriction to air flowing either into the coils at the rear or from the front grill.

Caution

Do not position multiple units in such a way that one unit blows directly at another.

A dehumidifier operating in a specific area will have little effect in drying an adjacent enclosed area, such as a closet, unless there is adequate circulation of air in and out of the adjacent area. Open interior doors and operate Dri-Eaz TurboDryers to maintain good air movement. Doors may need to be braced to prevent them from closing as a result of air movement.

Under normal circumstances the DrizAir Dehumidifier should be positioned centrally in the room. If, however, a particularly wet area is apparent, the air outlet grill can be directed towards that area of the room. The grill should never be closer than three feet from the wall.

In the case of individual rooms being dried, all doors and windows should be kept closed. Any traffic through doors should be kept to a minimum.

When drying several rooms, the units should be placed at equal distances from one another to cover the whole floor area. Internal doors and windows should be left open. Try and arrange each unit to blow air from one area into another, i.e. from a corridor into a room.

Normally, the DrizAir Dehumidifier will be serving an internal room volume between 2,000 and 14,000 cubic feet. In smaller rooms it will raise the internal temperature substantially. This helps reduce the relative humidity (Rh) and therefore assists in the drying

process. It is not recommended that the dehumidifier be operated at ambient conditions above 95° F (35° C).

Important Note

Avoid putting the dehumidifier on or over hardwood floors. Unexpected spillage from the unit could cause damage to flooring.

OPERATING CONDITIONS

The DrizAir Dehumidifier is an industrial grade unit designed to operate in cooler conditions than most home owner units. However, for best operation maintain temperatures between 70° and 80° F (21° - 27° C).

A light coating of frost on the coil is normal when the dehumidifier first begins to operate due to the refrigerant rushing through the coil. Under normal conditions, it should disappear within 60 minutes. It is also perfectly normal for frost to regularly form on the coil when the temperature of the room is relatively cool and/or if the humidity in the room is relatively low.

Warning

Do not allow any water inside the unit. If electrical components or wiring become wet, thoroughly dry before using. Do not unplug unit while it is operating.

When the dehumidifier is first put into operation in a saturated environment, it will remove relatively large amounts of moisture. It will continue to do so until the relative humidity in the area being dried is reduced to a point where extensive humidity damage should be significantly reduced. After this, the amount of moisture removed from the air will be considerably less.

The decreasing amount of moisture being extracted indicates that the dehumidifier is doing its job and that it is maintaining the relative humidity at its best level. The performance of the dehumidifier should be judged by the reduction of humidity, rather than by the amount of water being removed and deposited in the bucket. You can check the relative humidity and the temperature with a DHT200 or DHT600 thermo-hygrometer from Dri-Eaz Products. With this information specific humidity (grains per pound) can be obtained using a Psychrometric Chart.


Caution

When operating a DrizAir dehumidifier on a hardwood floor, it is suggested that the floor surface be protected due to possible minor leakage from the unit.

PRINCIPLES OF OPERATION

The DrizAir Dehumidifier dehumidifier is designed to reduce the relative humidity by removing moisture

from the air, thereby helping to dry wet carpets, cushion, floors, walls, contents and structural materials.

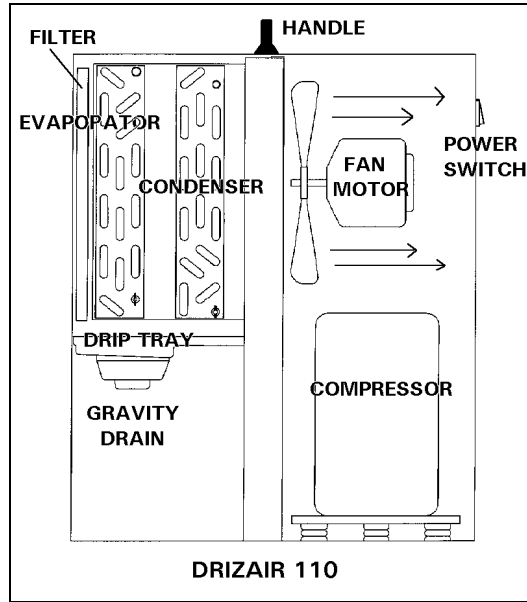

The principle of operation is that moisture laden air is drawn through the rear of the unit and passes over the evaporator coil. This air is cooled by the evaporator coil, resulting in condensation forming on that coil. This condensation builds up until water drips into the drainage tray and is removed through the gravity drain hose or an optional automatic pump out system.

The air then passes over the condenser coil where it is heated to a temperature slightly above that of the room. This heat is derived from the electrical components, the work done by the compressor and from the latent heat released from the condensed water. This warm dry air is then discharged from the front outlet grill and circulates around the room absorbing more water vapor before re-entering the DrizAir Dehumidifier.

In order to condense water vapor into liquid, energy must be removed. About 970 BTU's of energy must be released by the vapor to condense one pint of water (8000 BTU's to condense 1 gallon). This energy is retained within the water vapor and is referred to as latent heat.

Using the DrizAir Dehumidifier, the water vapor that is condensed releases energy back into the atmos-

phere and raises the air temperature in the room. Be aware that operating the unit in very small, enclosed rooms will dramatically increase the room temperature. Do not operate the unit when the ambient air temperature exceeds 95° F (35° C).

Drying Operation

Wet outside air is constantly passing through a building at a rate referred to as "air exchange rate." The rate depends on a number of factors, including the wind pressure on the building, and the amount of air gap around doors and windows. As an example, a typical home on average will change its air every two to three hours. In order to dry the structure of the building in a reasonable time, the relative humidity of the air should be about 40% Rh at 70° F (21° C). In most cases the air has to be dried artificially to reduce it to 40% Rh. It is important that when the specific humidity is greater than about 45 gpp outside, all doors and windows are kept closed.

Defrosting

When the DrizAir Dehumidifier is operating at a room temperature of 68° F (20° C) or higher, water will normally emerge from the unit. When operating at lower temperatures, frost may appear on the evaporator coil instead of water. An automatic control built into the DrizAir Dehumidifier allows ice to build up until it starts to create an adverse effect on air flow through the unit. During the frost build up, no water will drain from the unit. At low temperatures this normal ice buildup may last from 45 minutes to several hours, depending on conditions.

Warning

If the unit is switched off during use, wait for five (5) minutes before restarting. Attempting to re-start the unit before this period of time may cause damage to the compressor.

After a given buildup of ice has occurred, the thermostat senses the associated ice temperature and initiates the defrost cycle. During defrost considerable quantities of water will drain from the unit. As soon as the ice has melted, the normal fan operation will resume. The defrosting period will last up to 15 minutes, depending upon conditions. Periods between the defrost cycle will vary according to operating conditions.

WATER EXTRACTION RATES

DrizAir 80

Temp F/ Rh	Temp C / Rh	Extraction
------------	-------------	------------

50° F / 60%	10° C / 60%	9 Pints
60° F / 60%	16° C / 60%	18 Pints
70° F / 70%	21° C / 70%	42 Pints
80° F / 60%	27° C / 60%	40 Pints
90° F / 80%	32° C / 80%	76 Pints
100° F / 90%	38° C / 90%	81 Pints

DrizAir 110

Temp F / Rh	Temp C / Rh	Extraction
50° F / 60%	10° C / 60%	12 Pints
60° F / 60%	16° C / 60%	15 Pints
70° F / 70%	21° C / 70%	57 Pints
80° F / 60%	27° C / 60%	58 Pints
90° F / 80%	32° C / 80%	98 Pints
100° F / 90%	38° C / 90%	115 Pints

In all dehumidification systems the extraction rates vary with humidity and temperature. An electronic thermo-hygrometer from Dri-Eaz Products will help in checking for proper operation. The charts above provide some examples of tested extraction rates at various conditions.

GRAVITY FEED DRAINAGE

Water can be removed via the gravity drain hose at the rear of the unit. The gravity drain may only be used when there is an available container or permanent drain point that is below the outlet point.

OPTIONS

Automatic Pump

The DrizAir 80 DX and DrizAir 110 DX are outfitted with automatic pump systems. In this case, no gravity drainage is necessary. Instead, the end of the pump hose is placed in a sink, toilet, or other suitable drain.

Stacking Two Units

The DrizAir Dehumidifier is designed to be "stackable." The rubber feet of the top unit fit into the stacking dimples on the housing of the lower unit, keeping the top unit secure.

Do not stack two DrizAir Dehumidifiers on a Folding Stand, because of the risk of damage if the units were overturned.

Two DrizAir Dehumidifiers may be stacked when a pump is installed in the lower unit. The gravity drain from the top unit feeds into the pump, and water is pumped from both dehumidifiers at once.

Two units may also be stacked for convenience in storage. If the lower DrizAir Dehumidifier is equipped with the optional Wheels and Handle Kit, the handle may be folded down to allow stacking.

ELECTRICAL CONNECTIONS

The DrizAir Dehumidifier is equipped with a three-terminal type grounding plug on the electrical cord. It must be plugged into a grounded three-prong outlet. The unit is designed to operate on ordinary household 110/120 volt, 60 Hertz alternating current. Do not under any circumstances remove the round grounding plug from the cord.

Danger

Do not under any circumstances remove the round grounding plug from the cord. To do so will increase the risk of personal injury, shock or fire.

The DrizAir Dehumidifier is provided with a 16 gauge electrical cord. The unit may be operated from a grounded 110/120 volt system only. Extension cords must be heavy enough to deliver at least 10 amps to the unit. It is extremely important that the voltage at the unit itself, is within a tolerance of 10% of the nominal rating. If there is any doubt about voltage, then it should be tested at the unit on compressor start-up.

If there is a "dip" of more than 10% from the nominal supply rating, then action should be taken to improve the supply. Under no circumstances should the unit be left operating under these conditions. As the length of cable increases, the voltage available at the unit decreases. The following table provides a guide to maximum electric extension cord lengths.

Extension Cord Lengths and Gauges

Use 14 AWG	for cords up to	25 feet
Use 12 AWG	for cords up to	50 feet

OPERATING INSTRUCTIONS

1. When transporting the unit do not drop. Severe impact may damage the compressor.
2. If the unit has fallen over or been tipped, set it upright for one (1) hour before operating.
3. Before transporting a DrizAir 80 DX or DrizAir 110 DX after operating, leave the unit running and tip it back slightly onto its wheels. If enough water remains in the pump reservoir, tipping will activate the pump switch, to drain the reservoir and eliminate leakage during transport.
4. Operate the DrizAir Dehumidifier on a level surface only. This will prevent the unit from flooding. The

sturdy Folding Stand is designed to hold the DrizAir Dehumidifier above a bucket or drain.

5. Do not place the unit on bare hardwood floors due to potential water damage that may occur to the flooring material.
6. Plug the DrizAir Dehumidifier into a grounded 110/120 volt outlet and switch power "ON" to start.
7. For gravity drainage, place the drain hose into a suitable six gallon container or floor drain below the drain outlet.
8. If the unit is shut off for any reason, allow five minutes before restarting to avoid compressor damage.
9. Listen for proper operation of the fan and compressor before leaving the DrizAir Dehumidifier while operating.

Warning

If the unit is switched off during use, wait for five (5) minutes before restarting. Attempting to re-start the unit before this period of time may cause damage to the compressor.

MAINTENANCE

Do not attempt to disassemble or repair a dehumidifier if you are not qualified to do so. Normal maintenance operations and troubleshooting solutions can be handled by the technician in the field. More complex problems should be handled by an authorized service technician. See the Troubleshooting section.

Normal Maintenance Operations

To maintain the DrizAir Dehumidifier at optimum efficiency and to prevent breakdown, the evaporator, the air filter, and the condenser coils must be cleaned regularly.

The coils are the means by which heat is transferred to and from the air stream to the refrigeration circuit. The coils are critically engineered in order that correct transference takes place so the pressures within the refrigeration circuit remain within operating limits.

The air passing through the DrizAir Dehumidifier dehumidifier may be carrying considerable quantities of dust, lint and fungus spores. Even using the filter, the coils pick up dirt and their heat transferring properties decrease, resulting in reduced water extraction and undue pressure on the components.

If the unit is operating in a dusty environment both the filter and coils will need to be cleaned more frequently. For optimum efficiency, a maintenance sched-

ule should be set up for checking the coils and the filter at regular intervals. Clean as is necessary.

Cleaning the Filter

The filter should be cleaned after every job or more often if needed. Remove the filter shroud by lifting the bottom of filter shroud up and away from back panel. To clean the filter, use a light vacuum or wash with water and mild detergent. Spray directly against the foam in the direction of the air flow. Begin at the top of the filter and work down. Allow the filter to drain before reinstalling.

Cleaning the Coils

The first step in cleaning the two coils is directing compressed air, from both sides, through the coils. Ideally, both coils should be dry and the operation be completed outside (due to the dust that is created). After blowing out loose contamination, a wet cleaning process may be used.

A thorough cleaning of the evaporator coil can be performed with an aluminum evaporator coil cleaner available from a refrigeration service or supply outlet. Follow the product directions carefully.

If you flush the coil, do not permit water to enter the electrical compartment. Use a squirt bottle or a syringe so that you can control the water. Do not turn a hose on the coil!

Danger

Do not attempt to service or clean the dehumidifier while it is plugged into an electrical outlet. It is dangerous for an unqualified individual to attempt to disassemble or repair the dehumidifier.

After cleaning the coils, ensure that the drain tray, and drain hose are completely free of dirt. Clean the front grill with a vacuum cleaner and brush attachment.

Electrical Wiring & Cord

Inspect the power cord periodically to ensure insulation is in good condition. Remove the dehumidifier cover and ensure that all wires are secured away from the fan blade. Inspect the wiring for abrasions, nicks or cuts. Repair or replace the electric cord or wiring as needed. Connections that are loose will heat up and show discoloration as a result.

Fan Motor

Carefully clean the fan motor and blade each time you have the cover off for cleaning the coils.

Drain Hoses

Ensure that the drain hose is not kinked and in good condition before the DrizAir Dehumidifier leaves for

the job site and again after the installation is completed. Avoid leaving the drain hose in a kinked position during transport and storage.

SPECIFICATIONS

Item	DrizAir 80		DrizAir 110	
Height	21"	53 cm	21"	53 cm
Width	14"	36 cm	14"	36 cm
Depth	16"	41 cm	16"	41 cm
Use Weight	62 lbs	28 kg	60 lbs	27 kg
Ship Weight	68 lbs	31 kg	66 lbs	30 kg
Operating Range	50° - 95° F	10° - 35° C	45° - 100° F	7° - 38° C
Water Removal at 80°F/60% Rh	40 pints	19 liters	58 pints	27 liters
Water Removal at Maximum	81 pints	38 liters	115 pints	54 liters
Compressor Rating	4080 BTU		5500 BTU	
Power Required @ 80° F / 60% Rh	8 amps		5 amps	
Lighted Splash Guard Power Switch	On/Off		On/Off	

Specifications are subject to change without notice. Some values are approximate.

TROUBLESHOOTING

Caution

Troubleshooting solutions fall into two categories listed in the third column. Field Solutions (FS) are those procedures that can be handled by the technician in the field. Others solutions should be handled by a repair technician and are listed as Authorized Service Technician (AST).

WARNING: All the service procedures below should be executed with power off i.e. unplugged.

PROBLEM	CAUSE	SOLUTION
The dehumidifier does not operate	1. No power to machine	FS 1. Plug in the unit
	2. Switch not turned on	FS 2. Check power at outlet
		FS 3. Turn on the switch
The compressor will not start	1. Unit turned on too soon	FS 1. Switch off unit and wait five minutes before starting
	2. Faulty or broken wire	AST 2. Replace or repair broken or loose wire
	3. Overload preventing compressor start up	FS 3. Reduce room temperature below 95°F (35°C)
	4. Bad compressor	AST 4. Replace or repair compressor
Fan blade not turning	1. Obstructed or bent fan blade	AST 1. Remove obstruction or replace fan blade.
	2. Loose fan blade nut	FS 2. Tighten fan blade nut
	3. Loose or broken wire	AST 3. Replace broken wire
	4. Burned out fan motor	AST 4. Replace fan motor
Dehumidifier operating but room not dry	1. Not enough time to get dry	FS 1. Allow more time for drying
	2. Poor air movement	FS 2. Increase air movement with Dri-Eaz TurboDryers
	3. Excessive air infiltration	FS 3. Reduce airflow into the area being dried

**FOR PARTS AND SERVICE CALL YOUR LOCAL DISTRIBUTOR,
OR THE DRI-EAZ SERVICE DEPARTMENT AT (360) 757-7776**

TROUBLESHOOTING

Continued

PROBLEM	CAUSE		SOLUTION
Only partial frost or moisture on coils	1. Possible leak in system 2. Low charge in system	AST	1. Check for leak with gas leak detector
		AST	2. Repair and recharge system
		FS	3. Contact distributor or Dri-Eaz Products
No moisture or frost on coils	1. Possible leak in system 2. Capillary tubing damaged 3. Compressor not running	AST	1. Check for leak with gas leak detector
		AST	2. Look for damage, replace tubing
		FS	3. See Compressor Section
Unit continuously in defrost	1. Defective defrost control 2. Room temperature is too low	AST	1. Replace defrost control
		FS	2. Increase the room temperature
Unit not defrosting (heavy frost or ice buildup that persists over several hours)	1. Defective defrost control 2. Sensor improperly located or defective	AST	1. Replace defrost control
		AST	2. Reposition or replace sensor
Little water is being collected by the unit	1. Room air has been dried to 45% Rh 2. Room temperature is too low 3. Air movement through unit restricted	FS	1. Check humidity with a hygrometer
		FS FS/	2. Increase the room temperature
		AST	3. Increase airflow or clean out coils
Water overflowing the tray while using gravity drain hose	1. Unit not in level position 2. Gravity drain hose kinked	FS	1. Make sure dehumidifier is level
		FS	2. Straighten hose and remove kinks

**FOR PARTS AND SERVICE CALL YOUR LOCAL DISTRIBUTOR,
OR THE DRI-EAZ SERVICE DEPARTMENT AT (360) 757-7776**